


## AR3000A frequency configuration.

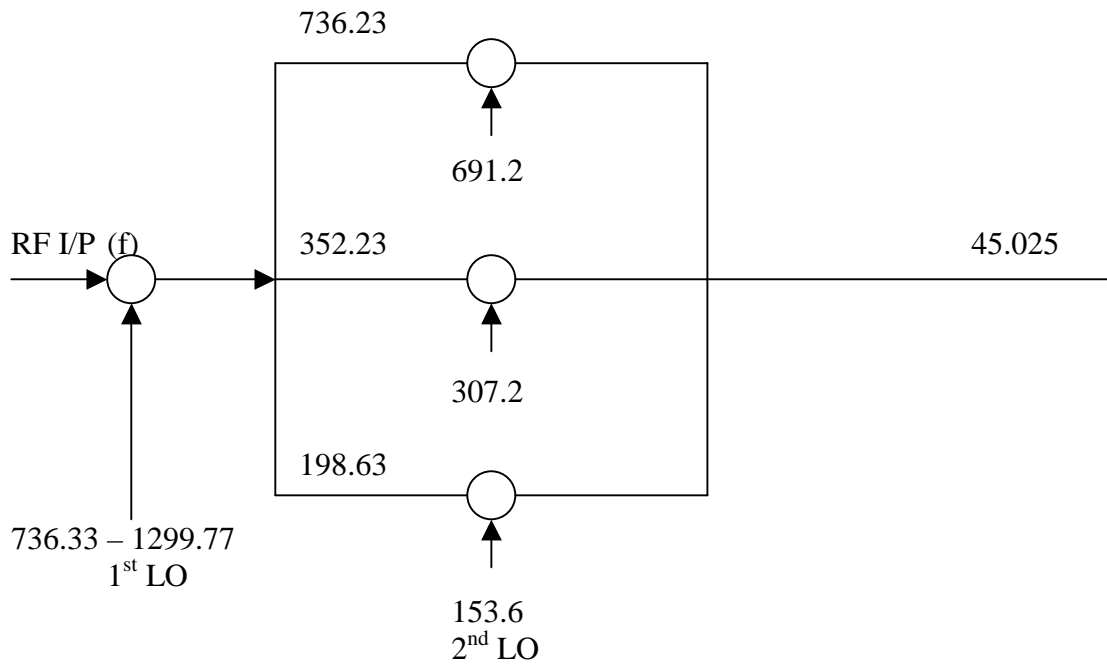

| <i>Receive frequency</i> | <i>1<sup>st</sup> IF frequency</i> |
|--------------------------|------------------------------------|
| 0.1 – 500MHz             | 736.23MHz                          |
| 500 – 940                | 352.23                             |
| 940 – 1300               | 198.63                             |
| 1300 – 1650              | 352.23                             |
| 1650 – 2036              | 736.23                             |

Frequency inversion at 45MHz and in following stages.

| <i>I/P frequency</i> | <i>Resultant 45MHz O/P</i>   |
|----------------------|--|
| 0.1 – 500MHz         | RF I/P (f) - 1 <sup>st</sup> LO + 2 <sup>nd</sup> LO. Resultant IF frequency is inverted |
| 500 – 940            | f - 1 <sup>st</sup> LO + 2 <sup>nd</sup> LO. Resultant IF frequency is inverted          |
| 940 – 1300           | f - 1 <sup>st</sup> LO - 2 <sup>nd</sup> LO. Not inverted                                |
| 1300 – 1650          | f - 1 <sup>st</sup> LO - 2 <sup>nd</sup> LO. Not inverted                                |
| 1650 – 2036          | f - 1 <sup>st</sup> LO - 2 <sup>nd</sup> LO. Not inverted                                |